



- Material: Tritan
- Capacity: 350/500/650/1000 ml
- Approved for food contact.
- Before first use and after each use wash the product with soft sponge and delicate dish soap, then wipe it with a soft cloth until it's dry.
- The water bottle should be filled about 2 cm free space from the top edge.
- Do not wash in the dishwasher.
- Any damage to the water bottle may cause uncontrolled spillage of fluid.
- The damaged product is unusable.

Air vent while drinking must be above the mouthpiece. Incorrect position may cause uncontrolled spillage of fluid.

Air vent

